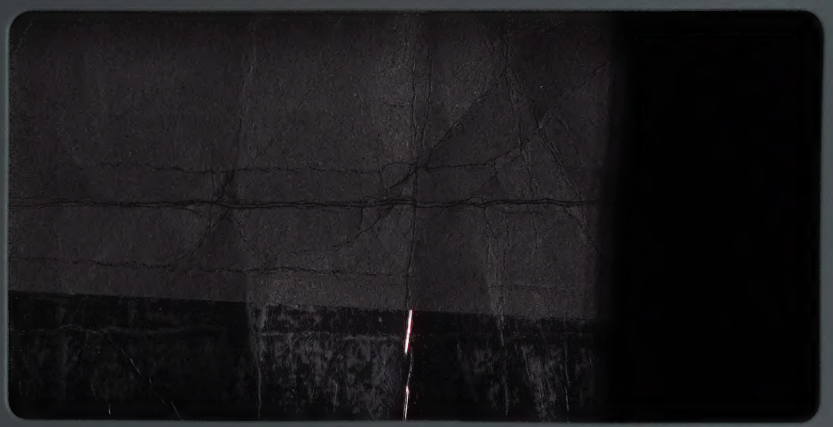

VALHALLA SCIENTIFIC

Building New Standards for Technology

2500

AC-DC Current Calibrator

Operating and Maintenance Manual

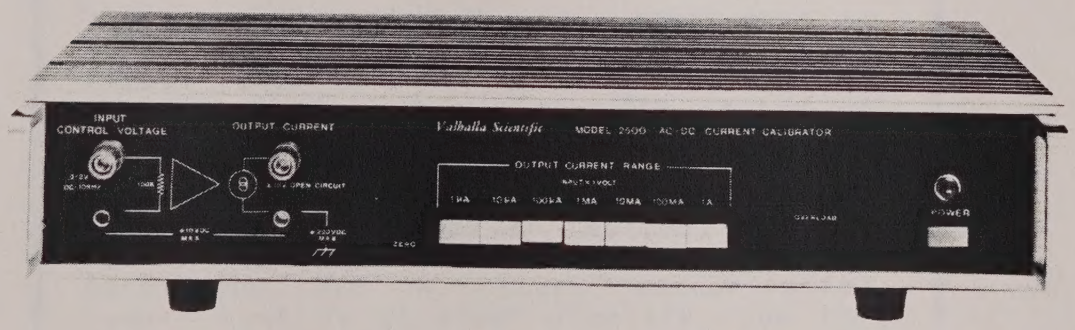

REVISED: 10/84

CERTIFICATION

Valhalla Scientific, Inc. certifies that this instrument was thoroughly tested and inspected and found to meet its published specifications when it was shipped from the factory. Valhalla Scientific, Inc. further certifies that its calibration measurements are traceable to the National Bureau of Standards to the extent allowed by NBS's calibration facility.

WARRANTY

The warranty period for this instrument is stated on your invoice and packing list. Please refer to these to determine appropriate warranty dates. We will repair or replace the instrument during the warranty period provided it is returned to Valhalla Scientific, Inc. freight prepaid. No other warranty is expressed or implied. We are not liable for consequential damages. Permission and a return authorization number must be obtained directly from the factory for warranty repair returns. No liability will be accepted if returned without such permission.

TABLE OF CONTENTS

Para.	Title	Page
	SECTION I — GENERAL INFORMATION	
1-1	Description	1-1
1-4	Accessories	1-1
1-6	Rack Mount-Option "R"	2-1
	SECTION II — INSTALLATION	
2-1	Introduction	2-1
2-3	Initial Inspection	2-1
2-6	Power Requirements	2-1
2-8	Installation	2-1
	SECTION III — OPERATION	
3-1	Introduction	3-1
3-3	Input Voltage	3-1
3-6	Range Switching	3-1
3-8	Output Current	3-1
3-10	Zero Adjustment	3-1
3-12	Overload Indicator	3-1
3-14	Application Information	3-1
	SECTION IV THEORY OF OPERATION	
4-1	General	4-1
4-3	Power Supply	4-1
4-5	Voltage to Current Converter	4-1
4-10	Overload Indicator	4-2
4-12	Range Selection	4-3
	SECTION V — MAINTENANCE	
5-1	Introduction	5-1
5-3	Required Test Equipment	5-1
5-5	Calibration Procedure	5-1
5-7	1 Ampere Range	5-1
5-11	100 Milliampere Range	5-2
5-14	10 Milliampere Range	5-2
5-17	1 Milliampere Range	5-2
5-20	100 Microampere Range	5-2
5-23	10 Microampere Range	5-2
5-26	1 Microampere Range	5-2
5-29	Frequency Response	5-3
5-31	1 Ampere Range	5-3
5-37	100 Milliampere Range	5-3
5-39	10 Milliampere Range	5-3
5-41	1 Milliampere Range	5-3
5-47	100 Microampere Range	5-3
5-53	10 Microampere Range	5-4
5-56	1 Microampere Range	5-4
5-61	Troubleshooting	5-4
5-63	Power Supplies	5-4
5-67	Amplifier Servicing	5-4

LIST OF ILLUSTRATIONS

Model 2500 Precision AC-DC Calibrator ..... Frontispiece
Figure 3-1. Block Diagram, DC Error Sources 3-2
Figure 3-2. Block Diagram, AC Error Sources 3-2
Figure 4-1. Simplified Circuit Diagram, Voltage/Current Converter 4-1
Figure 4-2. Simplified Circuit Diagram, Overload Indicator 4-2
Figure 5-1. Equipment Connections, DC Calibration 5-2
Figure 5-2. Equipment Connections, AC Compliance Test 5-3
Figure 5-3. Equipment Connections, AC Compliance Test Lower Ranges 5-3
Figure 5-4. Component Locations, Circuit Board 5-5
Figure 5-5. Schematic Diagram, Model 2500 AC-DC Current Calibrator 5-6

SPECIFICATIONS

2500 AC-DC CURRENT CALIBRATOR

Specifications

Range	1μA	10μA	100μA	1MA	10mA	100mA	1A
Resolution	10pA	100pA	1nA	10nA	100nA	1μA	10μA

Dynamic Range: 0 to 200% of range, DC or RMS AC, up to Maximum rated output.
Fullscale: Fullscale = 200% of range.
Maximum Output Current: 2 amps DC or RMS AC.
DC Accuracy: (180 days 25°C + 5°C) + .01% of fullscale + .01% of output.
AC Accuracy: (180 days 25°C ± 5°C) ± .01% of fullscale ± .05% of output to 1KHz. + .05% of fullscale + .05% of output to 10KHz. Add .05% of fullscale x compliance voltage x Frequency (KHz). 1μA and 10μA range limited to 1KHz. 100μA range limited to 5KHz.

Input Impedance: 100 Kilo-ohms
Compliance Voltage: 10 volts DC or Peak AC. 7 volts DC or Peak AC above 100% of range.
Input/Output Ratio: 2.00000 volt input produces full scale output.
Maximum Input: 3 volts DC or RMS AC
Output Protection: Fuse protected at 3 amps
Input Common Mode Rejection Ratio: 60 dB @ linearly decreasing to 40dB @ maximum frequency.
Temperature Range: 0 to 50°C.
Temperature Coefficient: 1/10 of accuracy specification per °C.
Power: 115/230 VAC + 10% 50-60Hz
Size: 299mm/9" L x 381mm/15" W x 64mm/2.5"H
Weight: 7 Kg/15 lbs. Net 9 Kg/20 lbs Shipping.
Duty Cycle: 25% at 2 Amperes, Increasing to 100% at 1 Ampere. (5 Minute Time Constant)

SECTION I

GENERAL INFORMATION

1-1 DESCRIPTION

1-2 The Valhalla Scientific Model 2500 AC-DC Current Calibrator is a complete wide range voltage-to-current convertor. This instrument will convert a precision input voltage to a proportional output current. If the input voltage is DC, the output current will have the polarity of the input voltage. If an AC signal is applied to the input terminals, the output current will have the frequency and phase of the applied input voltage. Seven current ranges, from one microampere to one ampere are selectable with the front panel range switch. The legends above each push-button indicate the current produced at the output terminals when one volt is applied to the input terminals.

1-3 The Model 2500 AC-DC Current Calibrator is housed in an extra heavy-duty aluminum case, ideally suited to the most rugged requirements.

1-4 ACCESSORIES

1-5 The Valhalla Scientific Model 2500 AC-DC Current Calibrator is shipped from the factory with detachable power cord and an instruction manual.

1-6 RACK MOUNT - OPTION R

1-7 The Model 2500 AC-DC Current Calibrator may be purchased with a rack mount adaptor, OPTION R, for mounting in a standard 19-inch rack.

SECTION II

INSTALLATION

2-1 INTRODUCTION

2-2 This section contains information for inspection and installation of the Model 2500 AC-DC Current Calibrator.

2-3 INITIAL INSPECTION

2-4 If the external shipping container shows evidence of in-transit damage, such damage should be immediately brought to the attention of the carrier and such damage noted on the bill of lading.

2-5 Unpack the instrument and retain the shipping container until the instrument has been inspected for possible damage in shipment. If in-shipment damage is observed, notify the carrier and obtain his authorization for repairs before returning the instrument to the factory. Where the external shipping container has shown evidence of damage in transit, but the instrument shows no external damage, it may be advisable to perform the calibration procedure of Section V to determine that the instrument has not incurred hidden damage.

2-6 POWER REQUIREMENTS

2-7 The Valhalla Model 2500 AC-DC Current Calibrator is normally shipped from the factory for operation from 105 to 125 volts AC at 50 to 400 Hz. To operate the instrument from 210 to 250 volts AC, requires reprograming of the power transformer primaries. This may be accomplished with the following procedure.

1. Remove the cover .

2. Locate the point on the vertical printed circuit board where the wires from the primary power plug connect to the printed circuit board. This is approximately 2.5 inches from the right end.

3. With a sharp instrument, make two cuts, approximately one-eighth-inch apart, on the clad of the vertical board between the points marked BRN and ORN. Peel the clad from the board between the two cuts.

4. Similarly, cut the clad between the points marked RED and YEL and remove the clad material between the two cuts.

5. Install a #22 AWG, or larger, jumper between the points marked RED and ORN.

6. Install a one-ampere fuse in the rear panel fuse holder. The unit is then ready to operate from 230 volt AC.

NOTE

The AC-DC Current Calibrator may be purchased from the factory preprogrammed to operate from 230 volts AC.

2-8 INSTALLATION

2-9 If the Model 2500 AC-DC Current Calibrator is to be used in the normal bench top configuration, installation requires only that the power cord be inserted into the mating connector on the rear panel of the instrument and that the other end of the cord be plugged into the wall receptacle. The instrument may then be connected to the precision reference input voltage and to the load to which current will be supplied.

2-10 The entire case of the AC-DC Current Calibrator is used as a heat sink for the output current transistors. Care should be exercised that the flow of air around the unit is not restricted, otherwise, internal temperatures may rise excessively, thereby shortening the life of internal components. When the instrument is installed in an equipment rack, caution should be exercised that there is free circulation of air around the instrument, and that the maximum ambient air temperature within the rack does not exceed 50° C. If the internal temperature of the rack rises above this limit, forced air cooling should be employed as necessary to reduce the ambient air temperature to 50°C or lower.

SECTION III

OPERATION

3-1 INTRODUCTION

3-2 This section of the manual contains the complete operating instructions for the Model 2500 AC-DC Current Calibrator.

3-3 INPUT VOLTAGE

3-4 The polarity and level of the input voltage determines the polarity and level of the output current. If the input voltage is zero, the output current will be zero. As the input voltage is increased, the output current will increase within the selected range. If the selected range is 1 MA, an input voltage of 1.0000 volts DC will produce an output current of 1.0000 MA. If the input is increased to 1.5000 volts DC, the output current will increase to 1.5000 MA. Similarly, if the 10 MA range is selected, the output currents will be 10.000 MA and 15.000 MA for inputs of 1.0000 volts DC and 1.5000 volts DC respectively. If the input voltage is of positive polarity, the output current will be of positive polarity. If the input voltage is of negative polarity, the output current will be of negative polarity. If an AC voltage is applied to the input terminals, the output current will have the amplitude, frequency and phase characteristics of the applied input voltage.

3-5 Maximum input voltage is 2 volts RMS AC or ± 2.8 volts DC. Although the accuracy specification does not define DC inputs higher than 2 volts DC, the unit is useable to inputs of 2.8 volts DC.

3-6 RANGE SWITCHING

3-7 Range switching is accomplished with a front panel, 7-station push-button switch. With this switch, the operator may select any one of the ranges of the instrument. The ranges are defined in decade increments of 1 MA, 10 MA, 100 MA, etc., based on a 1 volt input level. For example, if the 1 MA range is selected, and an input of 1 volt DC is applied, the output current will be 1 milliampere DC. If an input of 1 volt RMS AC is applied, the output will be 1 milliampere AC RMS.

3-8 OUTPUT CURRENT

3-9 As stated in previous paragraphs, the output current is proportional to the input voltage. Therefore, a 2 volt input will produce an output current which is 200% of the selected range (eg., if the 1 MA range is selected, the output current will be 2 MA). The effective output impedance of the current calibrator approaches infinity. Therefore, the output circuit will attempt to deliver the selected current into any load impedance applied to the output terminals. A 1 MA current output applied to a 1K ohm load impedance produces 1 volt across that load impedance. A 1 MA input current applied to a 2K ohm load impedance produces 2 volts, etc., until the output voltage reaches the ±10 volt DC or peak AC maximum compliance level. The 10 volts DC maximum compliance voltage corresponds to 7.07 volts RMS maximum compliance voltage for sine wave output currents.

3-10 ZERO ADJUSTMENT

3-11 A zero adjustment has been provided and is accessible through a hole in the front panel located to the left of the range switch. The instrument should be allowed a warm up period of one hour prior to making the zero adjustment. To make the zero adjustment, first short the input terminals together. Select the 1 MA range and connect a precision 1K ohm resistor and a digital volt meter (DVM) in parallel across the output terminals. If necessary, adjust the zero control until the DVM display is ± 100 microvolts DC or less.

3-12 OVERLOAD INDICATOR

3-13 An overload indicator is provided. It is an analog type warning system designed to inform the operator that the unit is being operated near or beyond the specification limits. There are two overload modes. The input overload indication occurs at approximately ±2.4 volts DC or 1.7 volts RMS AC. The output overload indication occurs at approximately ±7 volts DC or 5 volts RMS AC. As the input is increased, the overload indications will occur prior to the point where the specification limits are exceeded. It is, therefore, possible to have an overload indication when operating the instrument near one of its specification limits. When the overload indicator is illuminated, a careful check of the test setup should be made to verify proper operating conditions. Non-linear operating conditions are not necessarily encountered when an overload indication occurs, although input-output specifications may be exceeded.

3-14 APPLICATION INFORMATION

3-15 The application of a precision constant current source such as the Model 2500 AC-DC Current Calibrator requires a knowledge of potential outside error sources. The following paragraph outlines some of the more common error sources.

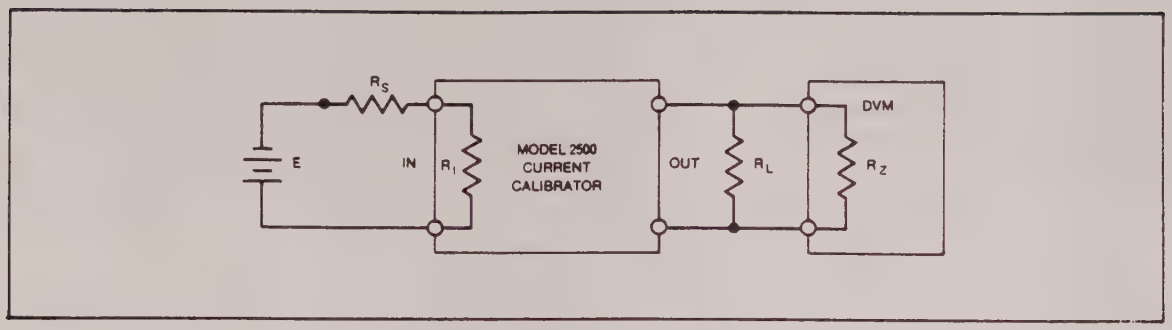

Figure 3-1. Block Diagram, DC Error Sources.

3-16 When measuring the DC current output of the AC-DC Current Calibrator, there are two primary potential error sources. The first occurs at the voltage input to the Current Calibrator. This error source is formed by the source impedance of the input voltage source, R_S, shown in Figure 3-1, forming a resistor divider with the 100K ohm input impedance of the Current Calibrator, R_I. To maintain the error at 0.01% or less, the ratio of R_I:R_S must be maintained at 10,000:1 or greater. Since R_I equals 100K ohms, the maximum impedance for R_S must be less than 10 ohms. The second potential error source occurs at the current output of the AC-DC Current Calibrator. This error source is the shunt impedance of the DVM, R_Z, shown in Figure 3-1, in parallel with the load impedance, R_L. To maintain the error at 0.01%, or less, the ratio of R_Z:R_L must be maintained at 10,000:1 or greater. If the input impedance to the DVM is 10 megohms, the maximum shunt impedance, R_L, should not exceed 1K ohms. For a shunt impedance, R_L, of 1 megohm, the input impedance to the DVM, R_Z, must be at least 10,000 megohms.

3-17 In addition to the error sources outlined above, there are other error sources to be considered when measuring AC current. The most common of the AC error sources is cable capacitance, CC, shown in Figure 3-2. RG 58A/U cable, for example, has a capacitance of approximately 30 picofarads per foot. If the output of the Current Calibrator is connected to the load resistance through two feet of cable, the cable capacitance is 60 picofarads. If the output frequency is 10 KHz and R_L is 100K ohms, the effective load impedance is:

$$Z = \frac{R_L \left(\frac{1}{2\pi \cdot 10\,KHz \cdot 60\,pf.}\right)}{\sqrt{R_L^2 + \left(\frac{1}{2\pi \cdot 10\,KHz \cdot 60\,pf.}\right)}} = 92.98\,K\Omega$$

3-18 The effective error due to shunt capacitance, CC, in this case is 7.02%. As shown in equation 3-1, shunt capacitance versus load impedance is a square-law function. Reducing the load impedance by a factor of 10 (100K ohms to 10K ohms) will reduce the error by 100 to 1. 7% to .07%. Another potential error source is inductance (L) in series with the load resistor, R_L. If the load resistance is 1 ohm and the series inductance is 5 microhenries, the effective load impedance at 10 KHz is:

$$Z = \sqrt{R_L^2 + (2\pi \cdot 10\,KHz \cdot 5\mu H)^2} = 1.0481\Omega$$

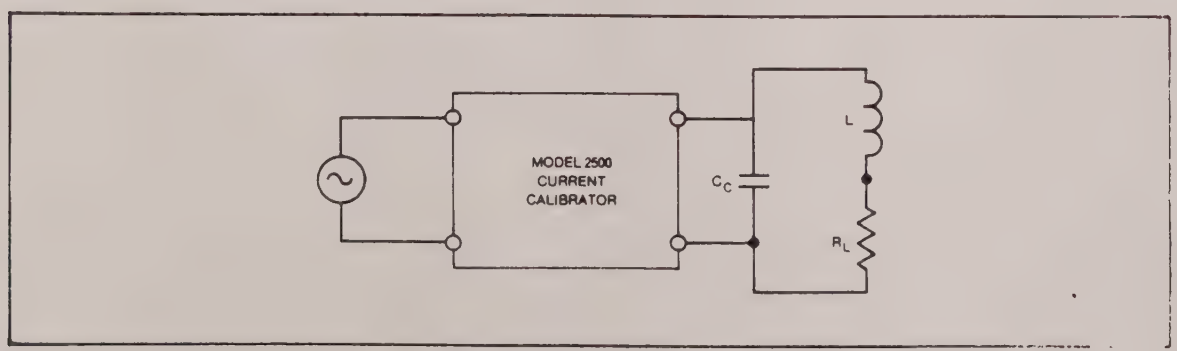

Figure 3-2. Block Diagram, AC Error Sources.

3-19 The effective error in load impedance caused by series inductance is, in this case, 4.81%. A precise current output from the Current Calibrator of 1.0000 amperes RMS at 10 KHz, when applied to this load will produce a voltage drop of 1.0481 volts RMS. In actual practice, series inductance becomes a problem only for shunt impedances of less than 5 ohms at frequencies of 10 KHz. The series inductance of most of the commercially available lab-standard type 1 ohm resistors is not low enough to produce accurate results when the output current is 1 ampere at 10 KHz. Special non-inductive precision current shunts are required.

SECTION IV

THEORY OF OPERATION

4-1 GENERAL

4-2 This section of the manual provides a description of the circuits of the Model 2500 AC-DC Current Calibrator. The circuit descriptions are referenced to the schematic diagram, Figure 5-5.

4-3 POWER SUPPLY

4-4 The circuits of the Model 2500 AC-DC Current Calibrator require +14 volts DC and —14 volts DC. These voltages are furnished by a bridge rectifier consisting of diodes CR16 through CR23 and series regulators Q1 and Q2. Zener diode CR4 provides the voltage reference level for the +14 volt series regulator Q1. CR5 provides the reference for the —14 volt series regulator Q2.

4-5 VOLTAGE TO CURRENT CONVERTER (TRANSCONDUCTANCE AMPLIFIER)*

4-6 A simplified diagram of the voltage to current converter is shown in Figure 4-1. The first amplifier operates at unity gain by virtue of the operational feedback loop provided by R7. The output of the first amplifier drives the inverting input of the second amplifier which operates open loop and, therefore, at very high gain. The output of the second amplifier provides a potentiometric feedback to the non-inverting input of the first amplifier. The system operates to maintain the output of the first amplifier, and the inverting input of the second amplifier, at approximately the same potential as that applied to the non-inverting input of the second amplifier. Very small differences between the two inputs of the second amplifier are sufficient to drive it to full scale output.

4-7 Assume that the output terminal is grounded and a 1 volt DC potential is applied to the input with the red input terminal positive. To equalize the inputs to the second amplifier, the first amplifier output must be driven to zero. This will be accomplished when the voltage drop across each of the four resistors (R5, R6, R7 and R16) is 0.25 volts. This condition will be satisfied when the output of the second amplifier is at +1 volt. The inputs to the first amplifier will both be at 0.25 volts and, since they are equalized, the output will be zero. (Offset, of course, a very small amount to drive the output of the second amplifier to +1 volt). +1 volt at the output of the second amplifier will cause 1 milliampere to flow through the 1K series resistor, R_S. Any tendency toward increasing the output voltage of the second amplifier is immediately compensated for through the feedback from its output to the non-inverting input of the first amplifier. Note that the sum of the voltages across the four resistors equals the voltage applied to the input terminals.

* Patent Pending

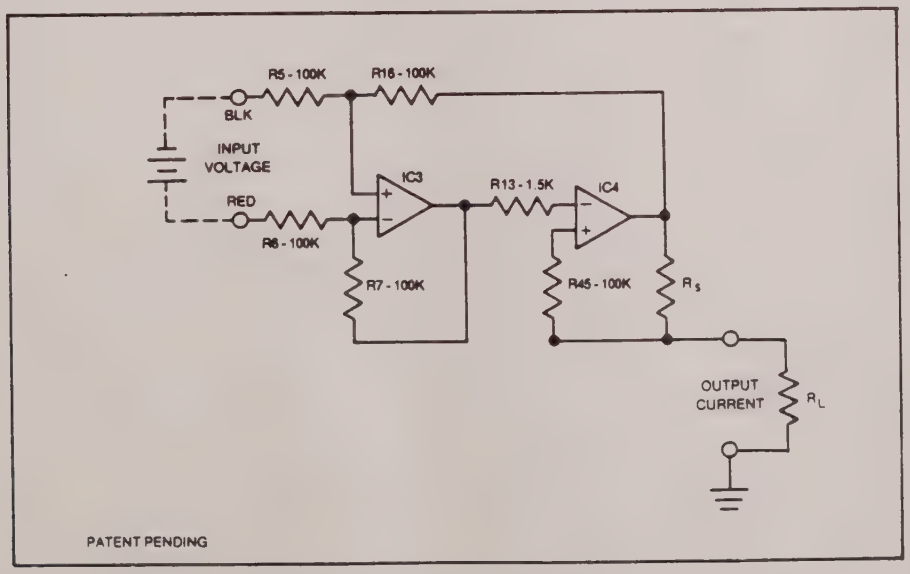

Figure 4-1. Simplified Circuit Diagram, Voltage/Current Converter.

4-8 Consider the conditions that are obtained when the ground is removed from the output terminal and a 1K resistor connected between the output terminal and ground. The reference level to the non-inverting input of the second amplifier will now be at some point above ground due to the current flowing through the load resistor, R_L. This will drive the output of the second amplifier in a positive direction and a point of stability will be reached when the output of the first amplifier is equal to the level applied to the non-inverting input of the second amplifier. Again, this condition will obtain when the voltage drop across each of the four resistors in the loop is equal to 0.25 volts. This will require that the output of the first amplifier be driven to +1 volt and the output of the second amplifier to +2 volts. Two volts across the series combination of R_S and R_L will produce one milliampere of current. Thus, although the resistance across the output terminals has been increased from zero to 1,000 ohms, the current flowing across the output terminals remains at one milliampere for both conditions. Note that the voltage difference between the output of the first amplifier and the output of the second amplifier is always equal to the voltage applied to the input terminals of the system. If the input signal were increased to +2 volts DC, the potential difference between the output of the first amplifier and the output of the second amplifier would increase to 2 volts and the voltage drop across the four resistors, to achieve equilibrium, would be 0.5 volts. If a 1K resistor is connected across the output terminals, the output of the second amplifier would be increased to +4 volts and the current through the series combination of R_S and R_L would increase to 2 milliamperes. Thus, the output current would be maintained proportional to the input voltage.

4-9 Since the system tends to maintain a voltage at the output of the second amplifier proportional to the input voltage, selecting different values of R_S with the front panel range switch will result in different current levels through R_S and the output load. The second amplifier is comprised of a high gain amplifier integrated circuit followed by a transistorized current amplifier in a "totem pole" arrangement. This provides positive and negative current outputs and and has the capacity to deliver up to 2 amperes to the load. The current amplifier is shown in the schematic diagram, Figure 5-5. Q3 and Q4 operate as constant current sources to bias Q5 and Q6. R54, which is connected to the non-inverting input of IC3, provides a fine adjustment for the overall gain of the voltage to current converter. R8 provides an adjustment to compensate for the offset of IC3.

4-10 OVERLOAD INDICATOR

4-11 The overload indicator circuit is shown in Figure 4-2. It operates in two modes; input overload and output overload. In the input overload mode, the input voltage is applied to the inputs of IC1 through R1 and R3. IC1 operates as a differential operational amplifier with unity gain. The output of IC1 drives the inverting input of IC2, which also operates at unity gain. The output of IC1 will go positive with a negative input voltage and the output of IC2 will go positive with a positive input voltage. When the input voltage, ±DC or peak AC, exceeds approximately 2.4 volts, Q9 will be turned on to illuminate the overload indicator, DS1. Q9 will be turned on, and DS1 illuminated, when the output voltage exceeds the threshold of CR14 and the drop across CR15 which approximates +7 volts DC or peak AC. Q9 will also be turned on in the overload mode when the output goes

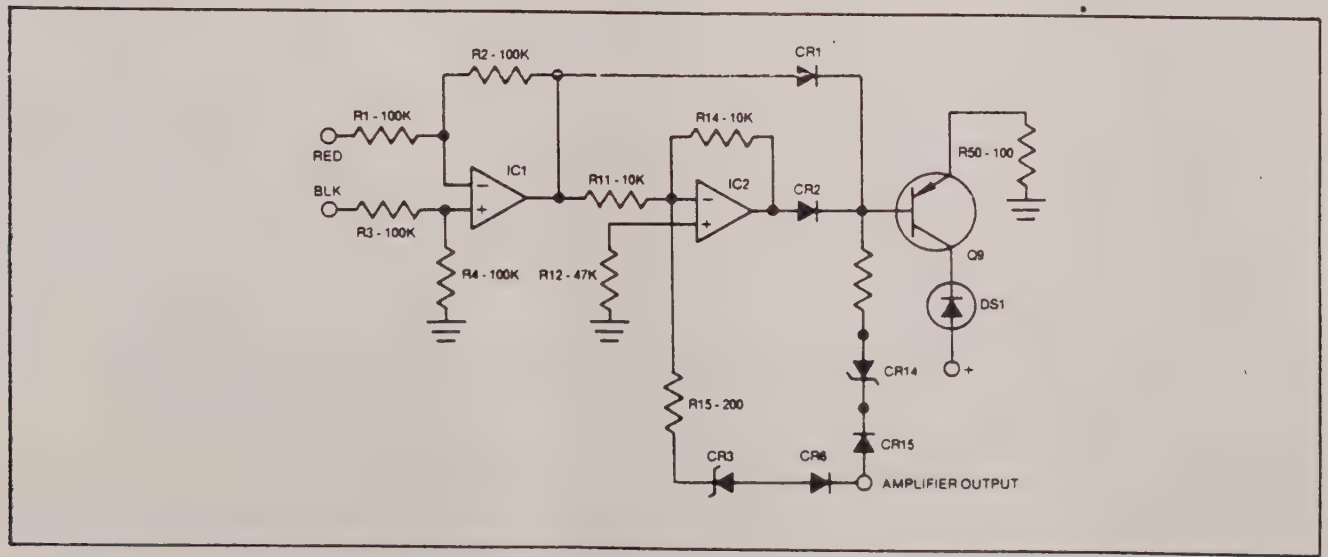

Figure 4-2. Simplified Circuit Diagram, Overload Indicator.

negative and exceeds the threshold of zener diode CR3 and the drop across CR6 which will occur at approximately —7 volts DC or peak AC. CR3 is connected to the inverting input of IC2 to drive the output of IC2 positive and turn on Q9 through CR2.

4-12 RANGE SELECTION

4-13 Range selection is accomplished with a 7-station, push-button, interlocking switch assembly which inserts different values of resistance for R_S, shown in Figure 4-1, for each range. Calibration potentiometers, in the resistor matrix connected to the push-button assembly, permit precise adjustment of output current for a given input voltage. The adjustments of these potentiometers are covered in the calibration procedure of Section 5.

SECTION V

MAINTENANCE

5-1 INTRODUCTION

5-2 This section contains information necessary for the maintenance of the Model 2500 AC-DC Current Calibrator. Included are a list of required test equipment, calibration procedures and a troubleshooting guide.

5-3 REQUIRED TEST EQUIPMENT

DC Voltage Standard
0 to 1 Volt DC
±0.003% Accuracy

5 Digit DVM
±0.003% Accuracy
10 Megohms Input Impedance on 1V DC Range

Precision DC Shunt Resistors
1.0000 Ohms, ±0.003%
10.000 Ohms, ±0.003%
100.00 Ohms, ±0.003%
1.0000K Ohms, ±0.003%
10.000K Ohms, ±0.003%
100.00K Ohms, ±0.003%
1.0000M Ohms, ±0.003%

DC Nullmeter
10 Microvolts Sensitivity

5-4 If the AC Frequency Response Test of Paragraph 5-29 is to be conducted, the following items of AC test equipment will be required.

Thermal Transfer System
Fluke Model 540, or equivalent, with current shunts for 1A, 0.1A, and 0.01A.

AC Voltmeter
Hewlett Packard 3450A001, or equivalent.

AC Voltage Standard
Optimation Model 126, or equivalent.

High Impedance AC Amplifier
Valhalla Scientific Model 2009, or equivalent.

AC Shunts
1.0000K Ohms, ±0.005%
10.000K Ohms, ±0.005%
100.00K Ohms, ±0.005%

5-5 CALIBRATION PROCEDURE

5-6 The following procedure should be performed on a routine basis to insure that the instrument remains within its specified accuracy. The calibration procedure should be performed after repairs are made on any of the accuracy determining components. Apply AC power and allow one hour for the instrument to stabilize.

5-7 1 AMPERE RANGE

5-8 Connect the equipment as shown in the diagram of Figure 5-1 using a 1.0000 ohm resistor for R_L and a 9 ohm resistor for R_S. Set the DC Voltage Standard to zero volts DC. Select the 1A range on the Model 2500 and adjust the front panel ZERO control for an indication on the DC Nullmeter of ±100 microvolts or less.

5-9 Set the DC Voltage Standard for 1.00 volts DC. Adjust R48 for an indication on the Nullmeter of ±100 microvolts, or less. Open and close the switch across R_S. The output voltage displayed on the DVM should change from 1 volt to 10 volts.

NOTE

If the DC Nullmeter reads less than ±200 microvolts at both positions of the switch, proceed to paragraph 5-11. If not, proceed to paragraph 5-10.

5-10 Open and close the switch across R_S and observe the direction and magnitude of change indicated on the Nullmeter. Adjust R54 for a Nullmeter reading change of less than ±100 microvolts between the open and closed positions of the switch. The total offset of the output generated by adjusting R54 can be ignored. Only the change in the reading between switch positions is of importance at this point. After adjusting R54, return to paragraph 5-8 and repeat the steps of paragraphs 5-8 and 5-9.

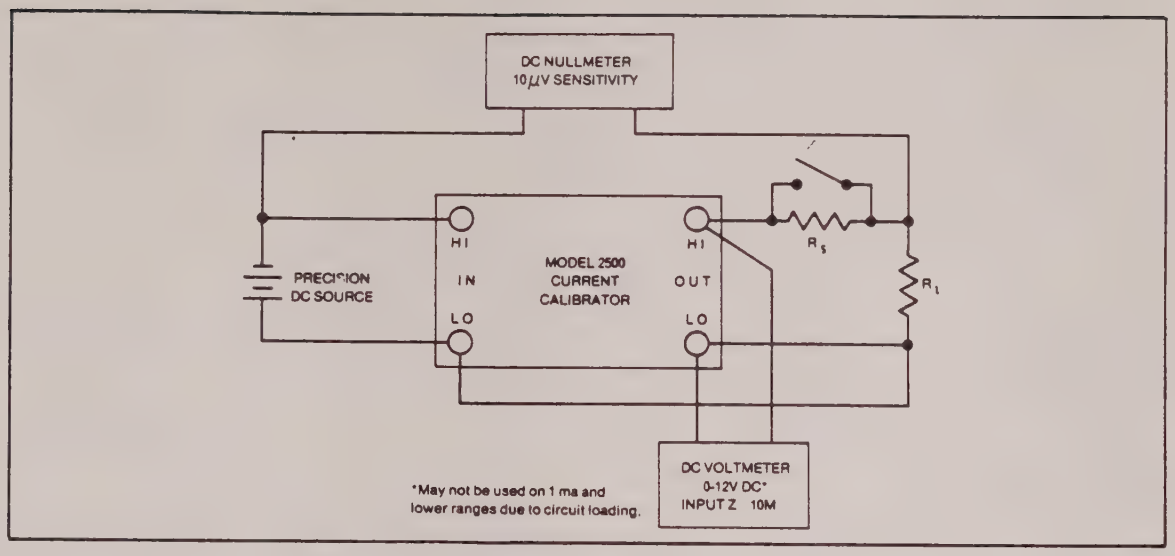

Figure 5-1. Equipment Connections, DC Calibration.

5-11 100 MILLIAMPERE RANGE

5-12 Connect a 10.000 ohm resistor for R_L and a 90 ohm resistor for R_S. Select the 100MA range and set the DC Voltage Standard to zero volts DC. Check for an indication of less than ±100 microvolts on the Nullmeter. Adjust the front panel ZERO control, if required.

5-13 Set the DC Voltage Standard to 1 Volt DC. Adjust R47 for an indication on the Nullmeter of less than ±200 microvolts with the switch both open and closed. The output compliance voltage need not be monitored during the remainder of the calibration procedure. The DVM will generate loading errors if it is connected during the remainder of the calibration procedure.

5-14 10 MILLIAMPERE RANGE

5-15 Select the 10MA range and connect a 100.00 ohm resistor for R_L and a 900 ohm resistor for R_S. Set the DC Voltage Standard for zero volts DC. Check for an indication on the Nullmeter of less than ±100 microvolts. Adjust the front panel ZERO control, if required.

5-16 Set the DC Voltage Standard to 1 volt DC. Adjust R46 for an indication on the Nullmeter of less than ±200 microvolts with and without the switch shorting R_S.

5-17 1 MILLIAMPERE RANGE

5-18 Select the 1MA range and connect a 10000.00 ohm resistor for R_L and a 9000 ohm resistor for R_S. Set the DC Voltage Standard to zero volts DC. Check for an indication on the Nullmeter of less than ±100 microvolts. Adjust the front panel ZERO control, if required.

5-19 Set the DC Voltage Standard to 1 volt DC. Adjust R38 for an indication on the Nullmeter of less than ±200 microvolts with and without the switch shorting R_S.

5-20 100 MICROAMPERE RANGE

5-21 Select the 100μA range and connect a 10.000K ohm resistor for R_L and close the switch across R_S. Set the DC Voltage Standard to zero volts DC. Check for an indication on the Nullmeter of ±100 microvolts, or less. Adjust the front panel zero control, if required.

5-22 Set the DC Voltage Standard to 1 volt DC. Adjust R40 for an indication on the Nullmeter of ±200 microvolts, or less.

5-23 10 MICROAMPERE RANGE

5-24 Select the 10μA range and connect a 100.00K ohm resistor for R_L and close the switch across R_S. Set the Voltage Standard to zero volts DC. Check for an indication on the Nullmeter of ±200 microvolts, or less. Adjust the front panel zero control, if required.

5-25 Set the DC Voltage Standard to 1 volt DC. Adjust R42 for an indication on the Nullmeter of ±200 microvolts, or less.

5-26 1 MICROAMPERE RANGE

5-27 Select the 1μA range and connect a 1.0000M ohm resistor for R_L and close the switch across R_S. Set the Voltage Standard to zero volts DC. Check for an indication on the Nullmeter of ±100 microvolts, or less. Adjust the front panel zero control, if required.

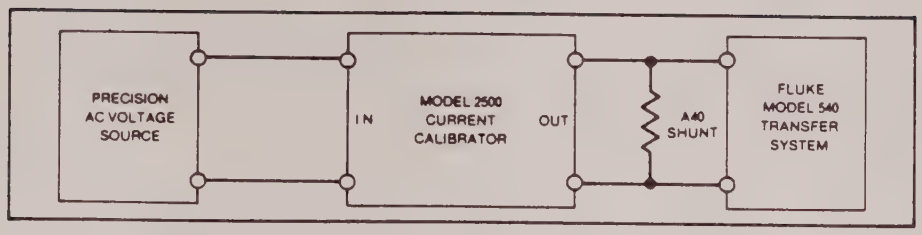

Figure 5-2. Equipment Connections, AC Compliance Test.

5-28 Set the Voltage Standard to 1 volt DC. Adjust R42 for an indication on the Nullmeter of ±100 microvolts, or less.

5-29 FREQUENCY RESPONSE

5-30 The frequency response test need not be performed on a routine basis as the 10 KHz bandwidth is inherent in the design. The frequency response test is an exacting procedure requiring specialized test equipment listed in paragraph 5-3 but not usually found in most service laboratories. Before attempting to perform this test, it is recommended that paragraph 3-13, Application Information, be completely reviewed and that the test operator thoroughly understands the sources of errors and compensates for them during the test. If test equipment other than that listed in paragraph 5-3 is to be used, a comparison of the specifications for the equipment listed and that to be used must be made to insure that the equipment used is an exact equivalent.

5-31 1 AMPERE RANGE

5-32 Connect the Fluke Model A40-1 (1 Ampere) shunt to the ouput of the Model 2500 AC-DC Calibrator and to the input of the Fluke Model 540 Thermal Transfer System. Set the Model 540 Mode switch in the AC Transfer position and the range switch to Shunt.

5-33 Select the 1A range on the Model 2500 and apply 1V RMS at 100 Hz from the AC Voltage Standard to the input of the Model 2500. Null the galvanometer on the Model 540 to zero.

5-34 Increase the frequency output of the AC Voltage Standard to 1000 Hz and verify that the output does not change by more than 0.06%.

5-35 Increase the frequency output of the AC Voltage Standard to 5000 Hz and verify that the output does not change by more than 0.15% from that of paragraph 5-33.

5-36 Increase the frequency output of the AC Voltage Standard to 10 KHz and verify that the output does not change by more than 0.15% from that of paragraph 5-33.

5-37 100 MILLIAMPERE RANGE

5-38 Connect the Fluke Model A40-.1 (100 Milliampere) shunt in place of the A40-1. Repeat the steps of paragraphs 5-33 through 5-36.

5-39 10 MILLIAMPERE RANGE

5-40 Connect the Fluke Model A40-.01 (10 Milliampere) shunt in place of the A40-.1. Repeat the steps of paragraphs 5-33 through 5-36.

5-41 1 MILLIAMPERE RANGE

5-42 Connect the equipment as shown in Figure 5-3 using the 1.000K ohms shunt. Total shunt capacitance, including leads and resistor capacitance, must not exceed 200 picofarads.

5-43 Apply 1V RMS at 100 Hz to the input of the Model 2500 and record the DVM reading.

5-44 Increase the frequency of the AC Voltage Standard to 1000 Hz and verify that the DVM reading does not change by more than 0.06%.

5-45 Increase the frequency of the AC Voltage Standard to 5000 Hz and verify that the DVM reading does not change by more than 0.15% from that obtained in the step of paragraph 5-43.

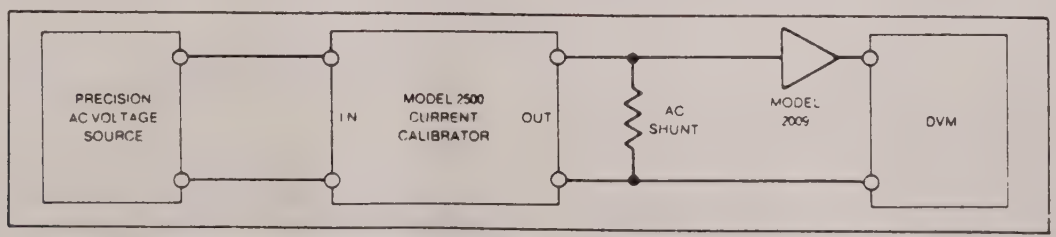

Figure 5-3 Equipment Connections, AC Compliance Test, Lower Ranges.

5-46 Increase the frequency of the AC Voltage Standard to 10 KHz and verify that the DVM reading does not change by more than 0.15% from that obtained in the step of paragraph 5-43.

5-47 100 MICROAMPERE RANGE

5-48 Connect the equipment as shown in Figure 5-3 using the 10.000K Ohms shunt. Total shunt capacitance, including leads and resistor capacitance, must not exceed 20 picofarads.

5-49 Apply 1V RMS at 100 Hz to the input of the Model 2500 and record the DVM reading.

5-50 Increase the frequency of the AC Voltage Standard to 1000 Hz and verify that the DVM reading does not change by more than 0.06%.

5-51 Increase the frequency of the AC Voltage Standard to 5000 Hz and verify that the DVM reading does not change by more than 0.15% from that obtained in the step of paragraph 5-49.

5-52 Increase the frequency of the AC Voltage Standard to 10 KHz and verify that the DVM reading does not change by more than 0.15% from that obtained in the step of paragraph 5-49.

5-53 10 MICROAMPERE RANGE

5-54 Connect the equipment as shown in Figure 5-3 using the 100.00K ohms shunt. Total shunt capacitance, including leads and resistor capacitance, must not exceed 2 picofarads.

5-55 Repeat the steps of paragraphs 5-49 through 5-52.

5-56 1 MICROAMPERE RANGE

5-57 Connect the equipment as shown in Figure 5-3 using the 100.00K ohms shunt. Total shunt capacitance, including leads and resistor capacitance, must not exceed 2 picofarads. Return the AC Voltage Standard to 100 Hz. Record the DVM reading.

5-58 Increase the AC Voltage Standard frequency to 1000 Hz. Verify that the DVM reading does not change by more than 0.06%.

5-59 Increase the AC Voltage Standard frequency to 5000 Hz. Verify that the DVM reading does not change by more than 0.15%

5-60 Increase the AC Voltage Standard frequency to 10 KHz. Verify that the DVM reading does not change by more than 0.15% from that obtained in the step of paragraph 5-57.

NOTE

For factory certifications with National Bureau of Standards traceability, contact your local Valhalla sales representative or Valhalla Scientific, Inc.

5-61 TROUBLESHOOTING

5-62 Difficulties with precision equipment often arise due to misinterpretation of the specifications. Make a careful check with precision test equipment to determine that the equipment is malfunctioning before proceeding with repair procedures.

5-63 POWER SUPPLIES

5-64 The +18V and —18V power supplies are formed by CR16 through CR23 and C9 and C10. These supplies are unregulated and the voltage will vary from 16.5V to 19.8V depending on line voltage and load.

5-65 The +15V DC power supply is formed of Q1, CR4 and R18. This voltage will vary slightly from unit to unit due to component tolerances and will typically be near 14.2V.

5-66 The —15V DC power supply is formed of Q2, CR5 and R20. This voltage will vary slightly from unit to unit due to component tolerances and will typically be near —14.4V.

5-67 AMPLIFIER SERVICING

5-68 Before attempting to service the amplifiers of the Model 2500, it is recommended that the technician review the theory of operation provided in Section IV. The following procedure is only an aid to isolate a catastrophic malfunction to a local area. Short the input terminals and short the output terminals. With the differential DC voltmeter, measure the voltage between the anode of CR15 and pin 6 of IC3. This voltage must be less than 15 millivolts. If it is more than 15 millivolts, IC3 is most likely defective. If it is less than 15 millivolts, the malfunction is in the second amplifier (and/or the current amplifiers), or the feedback network.

NOTE

If IC3, IC4, Q7, Q8 or R34 through R44 are replaced, the AC FREQUENCY RESPONSE TEST *MUST* BE PERFORMED. Contact your Valhalla sales representative or Valhalla Scientific, Inc. if the AC frequency response test is not satisfactory.

VALHALLA SCIENTIFIC INC. | PARTS LIST AC-DC Current Calibrator | MODEL : 2500 DWG NO: | REV: D

#	REF DES	VALHALLA PART NO	DESCRIPTION	CODE IDENT	MFG PART NO	QTY
1	C1,4,12	2-10005	Cap Cerm 50pf/500V	56289	5GAQ50	3
2	C2,5	2-30001	Cap Tan 10uf/25V	05397	T360B106M025AS	2
3	C3	2-10001	Cap Cerm 200pf/100V	56289	5GAT20	1
4	C6	2-60002	Cap Paper .1uf/100V	56289	225P10491	1
5	C9,10	2-40002	Cap Elec 11000uf/50V	14655	500-4184-01	2
6	C13	2-70001	Cap Var 2-12pf		21FG010	1
7	C14	2-60001	Cap Paper .22uf,100V Mylar		225P22491	1
8	C15	2-20011	Cap Mica 1000pf,500V Mica		CM06F0102J03	1
9	CR1,2, 6-13,15	3-20000	Diode	07263	IN4148	11
10	CR3,14	3-20005	Diode, Zener	07263	IN5234	2
11	CR16-23	3-20002	Diode, Rect	07263	IN4001	8
12	DS1	5-01005	LED Single Diode,Red		MV5074	1
13	DS2	5-01026	Neon Ind.	IDI	IDI2151A1	1
14	F1	5-04003	Fuse 3A	Little Fuse	312-003	1
15	F2	5-04003	Fuse 1A	Little Fuse	312-001	1
16	IC1,2	3-30013	IC Op-Amp	27014	LM301AH or N	2
17	IC3,4	3-30117	IC Op-Amp	27014	LH0052H	2
18	IC5	3-30036	IC Reg + 15V	27014	LM78MI5CP	1
19	IC6	3-30037	IC Reg - 15V	27014	LM79MI5CP	1
20	J1,3	5-10001	Binding Post	Superior	BP21 RC	2
21	J2,4	5-10002	Binding Post	Superior	BP21 WTC	2
22	J5	5-10063	Power Receptacle	Switch Craft	EAC-301	1
23	Q1,5	3-10007	Transistor NPN	04713	2N2102	2
24	Q6	3-10002	Transistor PNP	04713	2N4036	1
25	Q3,4	3-10000	Transistor FET	15818	U1899E	2
26	Q7	3-10008	Transistor NPN PWR	86684	2N3055 (STEEL)	1
27	Q8	3-10009	Transistor PNP PWR	86684	2N6246-8 (STEEL)	1
28	Q9	3-10003	Transistor NPN	04713	2N5172	1
29	R1-4,45	1-01081	Res Fxd 100K 1/4W 4%	81439	RC07GF104J	5
30	R5-7,16	1-20017	Res Fxd 100K .05% WW	00002	EI27-100K-.05%	4
31	R8	1-50001	Res. Var 50K 10%	91637	89 X R50K	1
32	R9,10	1-10012	Res Fxd 20K 1% MF	81349	RN60C2002F	2
33	R11,14,55	1-01061	Res Fxd 10K 1/4W 5%	81349	RC07GF103J	3
34	R12	1-01053	Res Fxd 4.7K 1/4W 5%	81349	RC07GF472J	1
35	R13,20	1-01043	Res Fxd 1.5K 1/4W 5%	81349	RC07GF152J	2
36	R15,31,32	1-01025	Res Fxd 200ohm 1/4W 5%	81349	RC07GF201J	3
37	R17	1-01041	Res Fxd 1K 1/4W 5%	81349	RC07GF102J	1
38	R19,23-26	1-01015	Res Fxd 47ohm 1/4W 5%	81349	RC07GF470J	5

NOTES:

#	REF DES	VALHALLA PART NO	DESCRIPTION	CODE IDENT	MFG. PART NO	QTY
39	R21,22	1-01038	Res Fxd 750ohm 1/4W 5%	81349	RC07GF751J	2
40	R27-30	1-30001	Res Fxd 1ohm 8W	OHMMITE	1500 BROWN DEVIL	4
41	R33	1-01045	Res Fxd 2K 1/4W 5%	81349	RC07GF202J	1
42	R34	1-20022	Res Fxd 1.01ohm +/-.1% WW			
43	R35	1-20025	Res Fxd 9.09ohm +/-.05% WW	ELLIOT	EI57-9R09-.05% 2PPM	1
44	R36	1-20029	Res Fxd 90.9ohm +/-.05% WW	ELLIOT	EI72-90R9-.05% 2PPM	1
45	R37	1-20012	Res Fxd 897.5ohm WW	ELLIOT	EI48-897R5-.05%	1
46	R38	1-50009	Res Var 5ohm 20%	71450	110-5ohm	1
47	R39	1-20011	Res Fxd 8.9725K WW	ELLIOT	EI48-8.9725K	1
48	R40	1-50010	Res Var 50ohm 20%	71450	110-50ohm	1
49	R41	1-20010	Res Fxd 89.725K WW	ELLIOT	EI48-89.725K-.05%	1
50	R42	1-50004	Res Var 500ohm 20%	71450	X201R501	1
51	R43	1-20009	Res Fxd 897.25K WW	ELLIOT	EI48-897.25K-.05%	1
52	R44	1-50003	Res Var 5K 20%	71450	X201R502	1
53	R46	1-50012	Res Var 10K	BECKMAN	68WR 10K	1
54	R47	1-50013	Res Var 1K	BECKMAN	68WR 1K	1
55	R48,54	1-50014	Res Var 100ohm	BECKMAN	68WR 100ohm	2
56	R50	1-01021	Res Fxd 100ohm 1/4W 5%	81349	RC07GF101J	1
57	R51	1-10033	Res Fxd 6.34K 1%	81349	RC60C6341F	1
58	R52	1-10031	Res Fxd 634ohm 1%	81349	RN60C6340F	1
59	R53	1-10032	Res Fxd 69.8ohm 1%	81349	RN60C698RF	1
60	R56	1-01010	Res Fxd 18ohm 1/4W 5%	81349	RC07GF180F	1
61	S1	5-03004	Range Switch	71590	VS5-03004	1
62	S2	5-03003	Power Switch	71590	004184	1
63	T1	4-20005	Power Transformer	53504	2500-010	1
64	1 ea.	4-30007	P.C. Board	53504	2500-700	1
65	1 ea.	4-30008	P.C. Board	53504	2500-701	1
66	1 ea.	4-10009	Top Cover	53504	3003-202	1
67	1 ea.	4-10016	Bottom Cover	53504	2500-201	1
68	1 ea.	4-10546	2500 "SCREENED" FRONT PANEL	53504	2500-100	1
69	2 ea.	4-10018	Side Rail	53504	2500-202	2
70	2 ea.	4-10019	Heat Sink	53504	2500-203	2
71	1 ea.	4-10022	Rear Panel	53504	2500-204	1
72	4 ea.	5-10015	Rubber Foot	08065	2091-W467	4
73	1 ea.		Power Cord			1
74	2 ea.	5-10057	Socket IC 8-Pin Round		8-IC5	2

NOTES:

#	REF DES	VALHALLA PART NO	DESCRIPTION	CODE IDENT	MFG PART NO	QTY
75	5 ea.	5-10005	Standoff		1530B-3/16	5
76	4 ea.		Solder Tail Contacts			4
77	2 ea.	5-10004	Fuse Clips		101002	2
78	1 ea.	5-10018	Fuse Holder		342004A	1
79	6"		3/4" X 1/2 Sponge Type	Adhesive Black Weather Stripping		1
80	8 ea.	5-10073	Button, Switch,BLK	71590	B-304-BLK	8
			HARDWARE:			
81	4 ea.		Screw, S.S., Phil Pan		8-32 X 3/8	4
82	6 ea.		Screw, Blk, Allen HD		6-32 X 3/8	6
83	17 ea.		Screw, S.S., Phil Pan		6-32 X 3/8	17
84	8 ea.		Screw, Nylon, Pan		4-40 X 1/2	8
85	2 ea.		Screw, S.S., Phil Pan		4-40 X 3/8	2
86	4 ea.		Screw, S.S., Phil Pan		6-32 X 1/4	4
87	4 ea.		Screw, S.S., Phil Flat		6-32 X 3/8	4
88	2 ea.		Washers, Internal Star		#4	2
89	21 ea.		Washers, Internal Star		#6	21
90	4 ea.		Washer, Split Lock		#6	4
91	4 ea.		Nut, Radio Hex		6-32	4
92	2 ea.		Nut, Radio Hex		4-40	2
93	1 ea.		WIRE BROWN 30"		22AWG BRN	1
94	1 ea.		WIRE BLACK 4"		22AWG BLK	1
95	1 ea.		WIRE GREEN 6"		12AWG GRN	1
96	1 ea.		WIRE VIOLET 6"		12AWG VIO	1
97	1 ea.		WIRE BUS 9"		22AWG BUS	1
98	1 ea.		WIRE RG 58C/U 5"		RG 58C/U	1
99	1 ea.		INSULATOR CLEAR 9"		22 AWG CLEAR	1
100	1 ea.		SHRINK TUBING 1/4DIA 5"		1/4 DIA BLK	1
101	4 ea.		LUG RING #6 18-22 AWG		#6 18-22 AWG	4
102	3 ea.		LUG RING #6 14-16 AWG		#6 14-16 AWG	3
103						
104						
105						
106						
107						
108						
109						
110						
111						
112						
113						
114						
115						
116						
117						

NOTES:

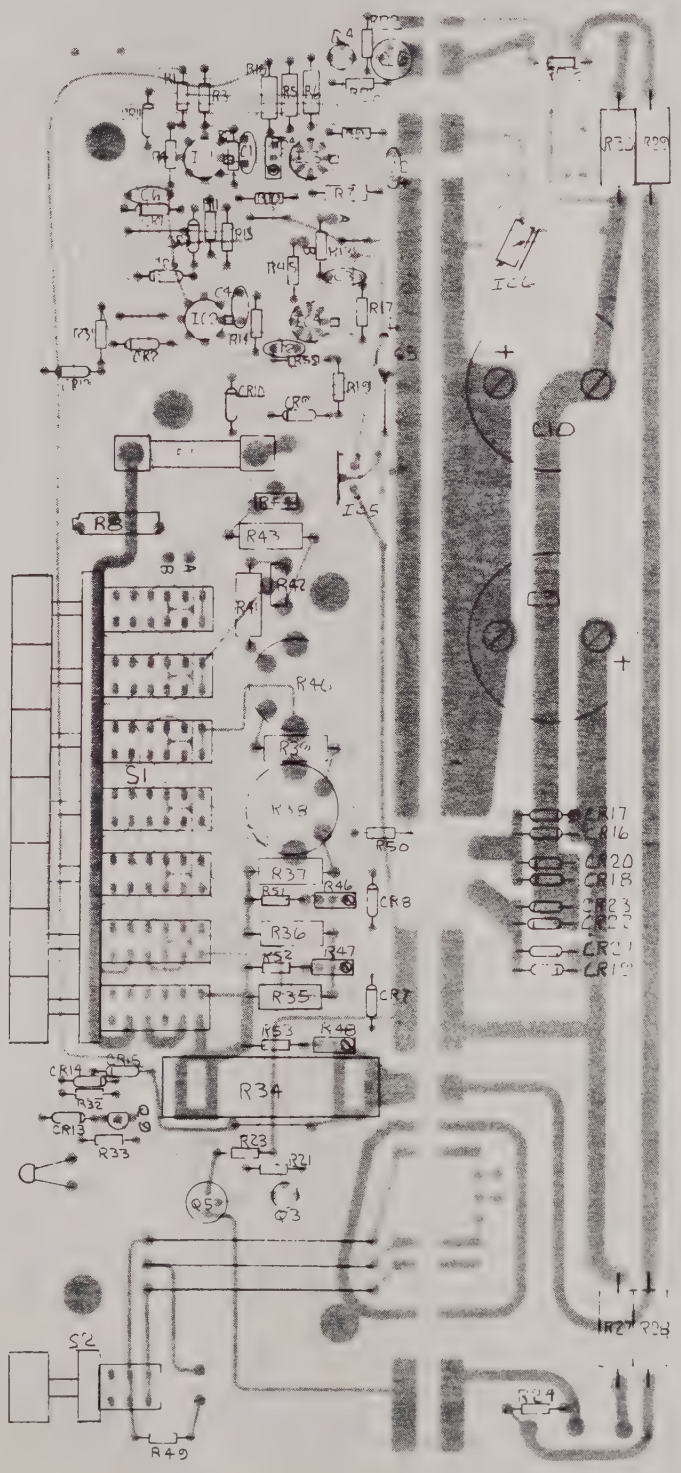

Figure 5-4 Component Locations, Circuit Board.

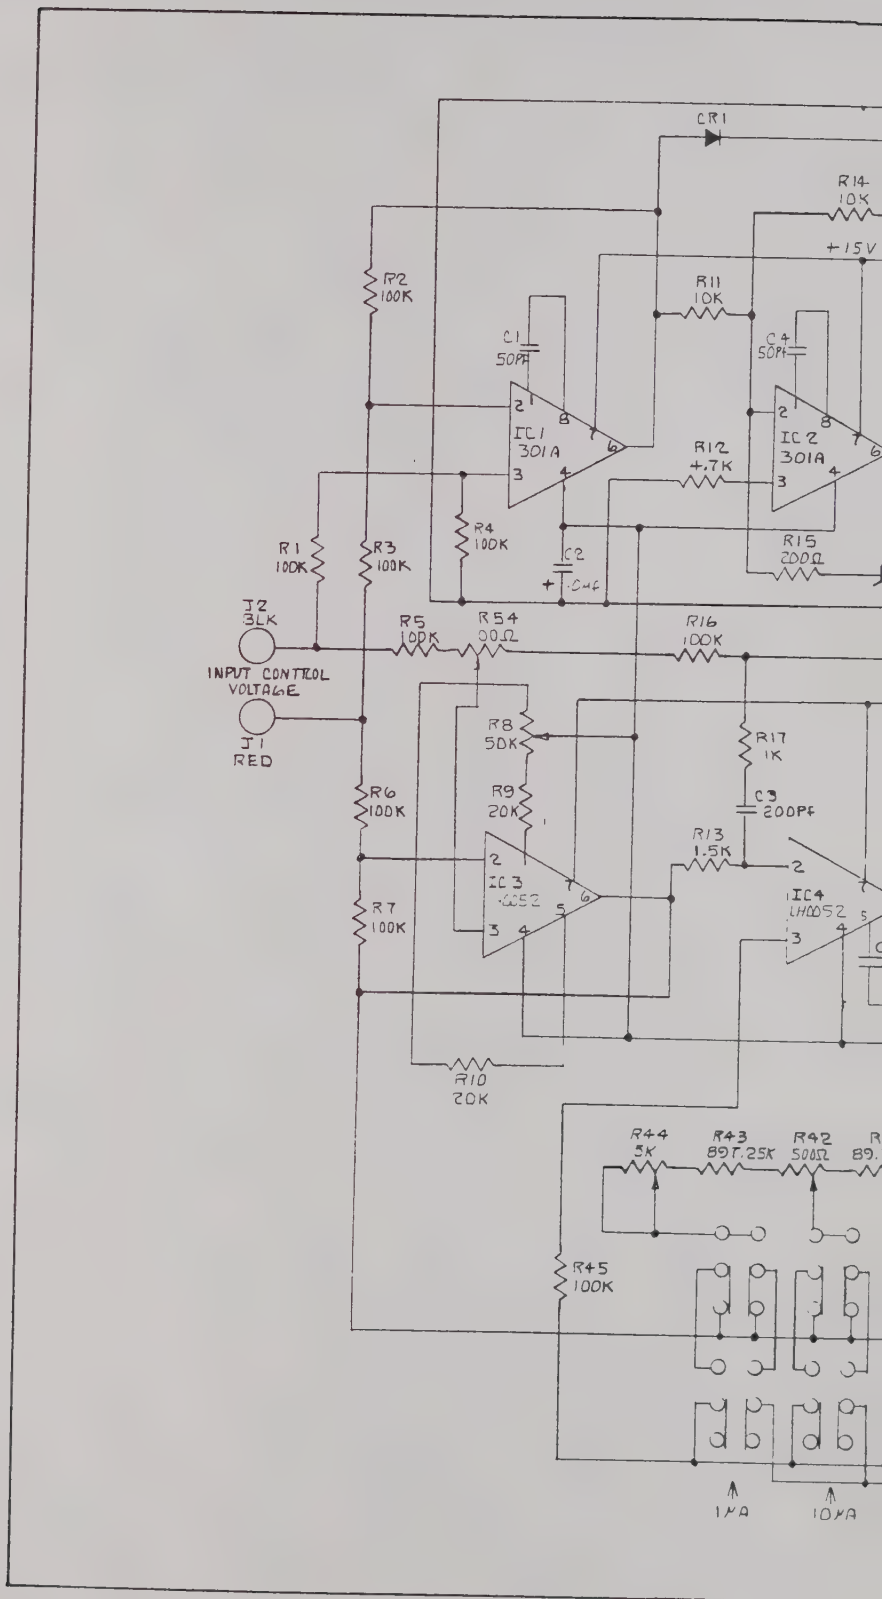
CR1
R14
10K
+15V
R2
100K
R11
10K
C1
50PF
C4
50PF
IC1
301A
IC2
301A
R12
4.7K
R4
100K
C2
.01uF
R15
200Ω
R1
100K
R3
100K
J2
BLK
INPUT CONTROL
VOLTAGE
J1
RED
R5
10DK
R54
00Ω
R16
100K
R8
50K
R17
1K
R6
100K
R9
20K
C3
200PF
R13
1.5K
IC3
IC4
LH0052
R7
100K
R10
20K
R44
5K
R43
89T.25K
R42
500Ω
R45
100K
1MA
10MA

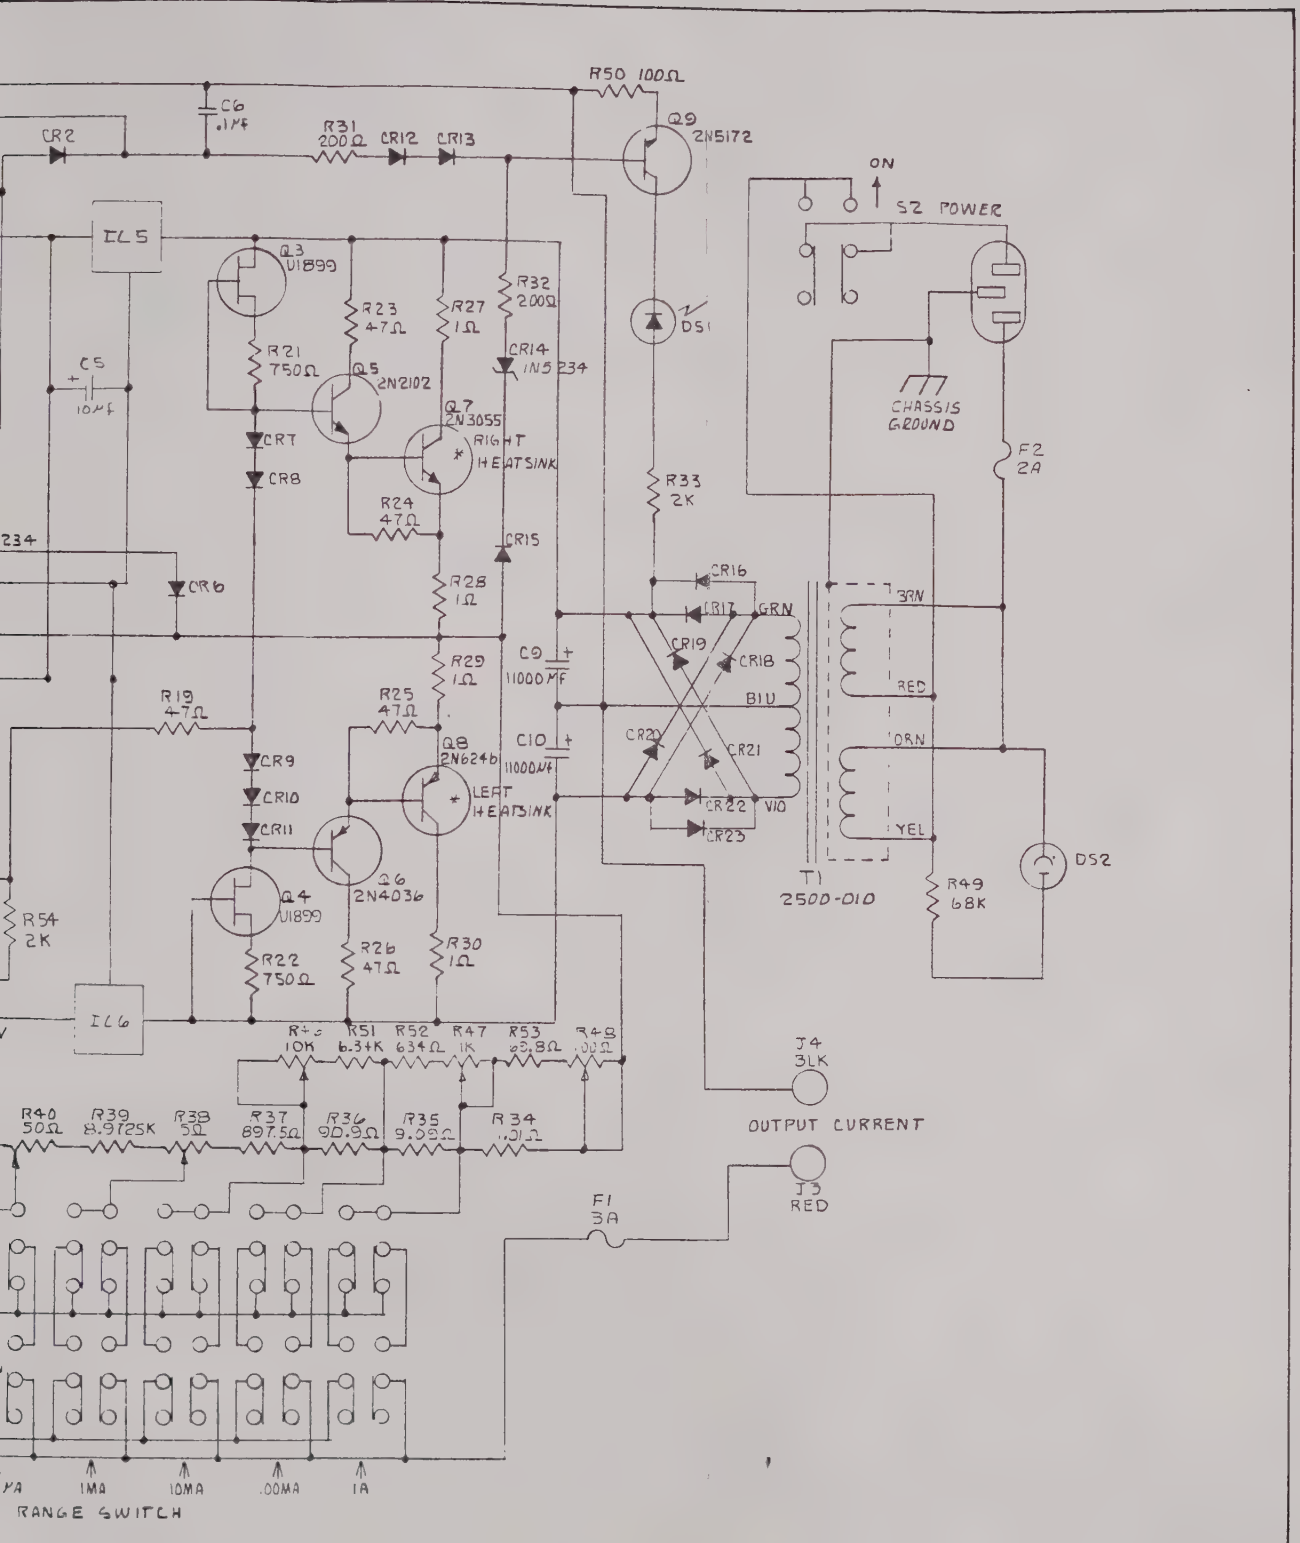

Figure 5-5. Schematic Diagram, Model 2500, AC-DC Current Calibrator.

Federal Supply Codes for Manufacturers

00656
Aerovox Corp
New Bedford, Massachusetts

00686
Film Capacitors, Inc.
Passaic, New Jersey

00779
AMP Inc.
Harrisburg, Pennsylvania

00853
Sangamo Electric Company
Pickens, South Carolina

01121
Allen-Bradley Co.
Milwaukee, Wisconsin

01255
Litton Industries, Inc.
Beverly Hills, California

01281
TRW Electronic Comp.
Semiconductor Operations
Lawndale, California

01295
Texas Instruments, Inc.
Dallas, Texas

01686
RCL Electronics Inc.
Manchester, New Hampshire

02114
Ferroxcube Corp.
Saugerties, New York

02131
General Instrument Corp.
Westwood, Maine

02799
Areo Capacitors, Inc.
Chatsworth, California

03508
General Electric Co.
Syracuse, New York

03797
Genisco Technology Corp.
Compton, California

03877
Transistron Electronic Corp.
Wakefield, Massachusetts

03911
Clairex Corp.
Mt. Vernon, New York

04009
Arrow Hart Inc.
Hartford, Connecticut

04217
Essex International Inc.
Anaheim, California

04222
AVX Corp.
Myrtle Beach, Florida

04423
Telonic Industries
Laguna Beach, California

04713
Motorola Inc.
Phoenix, Arizona

04946
Standard Wire & Cable
Los Angeles, California

05276
Pomona Electronics Co., Inc.
Pomona, California

05277
Westinghouse Electric Corp.
Youngwood, Pennsylvania

05397
Kemet, Union Carbide Corp.
New York, New York

05574
Viking Industries
Chatsworth, California

05820
Wakefield Engineering Inc.
Wakefield, Massachusetts

06001
General Electric Co.
Columbia, South Carolina

06383
Panduit Corp.
Tinley Park, Illinois

06473
Bunker Ramo Corp.
Chatsworth, California

06555
Beede Electrical Instrument Co.
Penacook, New Hampshire

06743
Clevite Corp.
Cleveland, Ohio

07088
Kelvin Electric Company
Van Nuys, California

07256
Silicon Transistor Corp.
Chelmsford, Massachusetts

07263
Fairchild Semiconductor
Mountain View, California

07344
Bircher Co., Inc.
Rochester, New York

07597
Burndy Corp.
Rochester, New York

07716
I R C Incorporated
Burlington, Iowa

07910
Teledyne Semiconductor
Hawthorne, California

08065
Accurate Rubber and Plastics Co.
San Diego, California

08261
Spectra Strip Corp.
Garden Grove, California

08530
Reliance Mica Corp.
Brooklyn, New York

08806
General Electric Co.
Cleveland, Ohio

09026
Babcock Electronics Corp.
Costa Mesa, California

09214
G. E. Co. Semi-Conductor
Auburn, New York

09353
C and K Components
Watertown, Massachusetts

09922
Burndy Corp.
Norwalk, Connecticut

09969
Dale Electronics Inc.
Yankton, S. Dakota

11236
CTS of Berne
Berne, Indiana

11403
Best Products Co.
Chicago, Illinois

11503
Keystone Columbia Inc.
Warren, Michigan

11532
Teledyne Relays
Hawthorne, California

11711
General Instrument Corp.
Hicksville, New York

12014
Chicago Rivet & Machine Co.
Bellwood, Illinois

12060
Diodes, Inc.
Chatsworth, California

12136
Philadelphia Handle Co.
Camden, New Jersey

12405
Hysol Corporation
El Monte, California

12406
Elpac, Incorporated
Fullerton, California

12615
U.S. Terminals Inc.
Cincinnati, Ohio

12617
Hamlin Inc.
Lake Mills, Wisconsin

12697
Clarostat Mfg. Co.
Dover, New Hampshire

12969
Unitrode Corp
Watertown, Massachusetts

13103
Thermalloy Co., Inc.
Dallas, Texas

13327
Solitron Devices Inc.
Tappan, New York

13454
Texas Crystals
River Grove, Illinois

13511
Amphenol Cadre Div.
Los Gatos, California

13606
Use 56289
Sprague Electric Co.
Concord, New Hampshire

14099
Semtech Corp.
Newbury Park, California

14655
Cornell-Dublier Electronics
Newark, New Jersey

14752
Electro Cube Inc.
San Gabriel, California

14936
General Instrument Corp.
Hicksville, New York

15801
Fenwal Electronics Inc.
Framingham, Massachusetts

15818
Teledyne Semiconductors
Mountain View, California

15849
Useco Inc.
Van Nuys, California

15898
International Business
Machines Corp.
Essex Junction, Vermont

16332
Replaced by 28478

16473
Cambridge Scientific Ind.
Cambridge, Maryland

16758
Delco Electronics
Kokomo, Indiana

17856
Siliconix, Inc.
Santa Clara, California

18324
Signetics Corp
Sunnyvale, California

Federal Supply Codes for Manufacturers (cont.)

18612
Vishay Intertechnology Inc.
Malvern, Pennsylvania

18722
R C A
Mountaintop, Pennsylvania

18927
GTE Sylvania Inc.
Titusville, Pennsylvania

21604
Bucheye Stamping Co.
Columbus, Ohio

21845
Solitron Devices Inc.
Riveria Beach, Florida

22767
ITT Semiconductors
Palo Alto, California

23936
Pamotor Div.
Burlingham, California

24355
Analog Devices Inc.
Norwood, Massachusetts

24655
General Radio
Concord, Massachusetts

25088
Siemen Corp.
Isilen, New Jersey

25403
Amperex Electronic Corp.
Slatersville, Rhode Island

25684
Victoreen Instrument Co., Inc.
Oak Lawn, Illinois

27014
National Semiconductor Corp.
Santa Clara, California

27556
IMB Electronic Products
Santa Fe Springs, California

27264
Molex Products
Downers Grove, Illinois

28213
Minnesota Mining & Mfg. Co.
St. Paul, Minnesota

28480
Hewlett Packard Co.
Palo Alto, California

29083
Monsanto Co., Inc.
Santa Clara, California

29604
Stackpole Components Co.
Raleigh, North Carolina

30323
Illinois Tool Works, Inc.
Chicago, Illinois

30983
Electra/Midland
San Diego, California

32539
Mura Corp.
Great Neck, New York

32897
Erie Technological Products, Inc.
Carlisle, Pennsylvania

32997
Bourns Inc.
Riverside, California

33173
General Electric Co.
Owensboro, Kentucky

34333
Silicon General
Westminister, California

34335
Advanced Micro Devices
Sunnyvale, California

34802
Electromotive Inc.
Kenilworth, New Jersey

37942
P.R. Mallory & Co., Inc.
Indianapolis, Indiana

43543
Nytronics Inc.
Geneva, New York

44655
Ohmite Mfg. Co.
Skokie, Illinois

49671
RCA Corp.
New York, New York

49956
Raytheon Company
Lexington, Massachusetts

50088
Mostek Corp.
Carrollton, Texas

50579
Litronix Inc.
Cupertino, California

51605
Scientific Components Inc.
Linden, New Jersey

53021
Sangamo Electric Co.
Springfield, Illinois

53504
Valhalla Scientific, Inc.
San Diego, California

54294
Cutler-Hammer Inc.
Selma, North Carolina

55026
Simpson Electric Co.
Elgin, Illinois

56289
Sprague Electric Co.
North Adams, Massachusetts

58474
Superior Electric Co
Bristol, Connecticut

63743
Ward Leonard Electric Co., Inc.
Mount Vernon, New York

65092
Weston Instruments Inc.
Newark, New Jersey

70563
Amperite Company
Union City, New Jersey

70903
Belden Corp.
Geneva, Illinois

71279
Cambridge Thermionic Corp.
Cambridge, Massachusetts

71400
Bussmann Mfg.
Saint Louis, Missouri

71450
CTS Corp.
Elkhart, Indiana

71468
ITT Cannon Electric Inc.
Santa Ana, California

71482
Clare, C.P. & Co.
Chicago, Illinois

71590
Centrelab Electronics
Milwaukee, Wisconsin

71707
Coto Coil Co., Inc.
Providence, Rhode Island

71744
Chicago Miniature Lamp Works
Chicago, Illinois

71785
TRW Electronics Components
Chicago, Illinois

72005
Wilber B. Driver Co.
Newark, New Jersey

72259
Nytronics Inc.
Pelham Manor, New Jersey

72619
Dialight Div.
Brooklyn, New York

72982
Erie Tech. Products Inc.
Erie, Pennsylvania

73138
Bechman Instrument Inc.
Helipot Division
Fullerton, California

73445
Amperex Electronic Corp.
Hicksville, New York

73734
Federal Screw Products, Inc.
Chicago, Illinois

73899
JFD Electronics Co.
Brooklyn, New York

73949
Guardian Electric Mfg. Co.
Chicago, Illinois

74276
General Instrument Corp.
Neptune, New Jersey

74306
Piezo Crystal Co.
Carlisle, Pennsylvania

74970
Johnson E.F., Co.
Waseca, Minnesota

75042
TRW Electronics Components
IRC Fixed Resistors
Philadelphia, Pennsylvania

75378
CTS Knights Inc.
Sandwich, Illinois

75382
Kulka Electric Corp.
Mount Vernon, New York

75915
Littlefuse Inc.
Des Plaines, Illinois

76055
Mallory Controls
Frankfort, Indiana

76493
J.W. Miller Company
Los Angeles, California

76854
Oak Industries Inc.
Crystal Lake, Illinois

77342
Potter & Brumfield Div.
Princeton, Indiana

77638
General Instrument Corp.
Rectifier Division
Brooklyn, New York

78488
Stackpole Carbon Co.
Saint Marys, Pennsylvania

78553
Eaton Corp.
Cleveland, Ohio

80031
Electro-Midland Corp.
Mepco Div.
Norristown, New Jersey

56289
Sprague Products
North Adams, Massachusetts

80294
Bourns Inc., Instrument Div.
Riverside, California

81073
Grayhill, Inc
La Grange, Illinois

Federal Supply Codes for Manufacturers (cont.)

81095
Triad Transformer Corp.
Venice, California

81312
Winchester Electronics
Div. of Litton Industries Inc.
Oakville, Connecticut

81483
International Rectifier Corp.
Los Angeles, California

81741
Chicago Lock Co.
Chicago, Illinois

82389
Switchcraft Inc.
Chicago, Illinois

82877
Rotron Inc.
Woodstock, New York

82879
ITT Royal Electric Div.
Pawtucket, Rhode Island

83003
Varo Inc.
Garland, Texas

83298
Bendix Corp.
Eatontown, New Jersey

83330
Herman H. Smith, Inc.
Brooklyn, New York

83594
Burroughs Corp.
Plainfield, New Jersey

83740
Union Carbide Corp.
New York, New York

84171
Arco Electronics
Great Neck, New York

84411
TRW Electronic Components
Ogallala, Nebraska

84613
Fuse Indicator Corp.
Rockville, Maryland

84682
Essex International Inc.
Peabody, Massachusetts

86684
Radio Corp. of America
Harrison, New Jersey

88219
Gould Inc.
Trenton, New Jersey

88245
Litton Systems Inc.
Useco Div.
Van Nuys, California

88419
Cornell-Dubilier Electronic Div
Fuquay-Varian, North Carolina

89730
G.E. Co.
Newark, New Jersey

90201
Mallory Capacitor Co.
Indianapolis, Indiana

56365
Square D Co.
Chicago, Illinois

90303
Mallory Battery Co.
Tarrytown, New York

91094
Essex International Inc.
Newmarket, New Hampshire

91293
Johanson Mfg. Co.
Boonton, New Jersey

91506
Augat Inc.
Attleboro, Massachusetts

91637
Dale Electronics Inc.
Columbus, Nebraska

91662
Elco Corp.
Willow Grove, Pennsylvania

71468
Gremar Mfg. Co., Inc.
ITT Cannon/Gremar
Santa Ana, California

91802
Industrial Devices, Inc.
Edgewater, New Jersey

91833
Keystone Electronics Corp.
New York, New York

91929
Honeywell Inc.
Micro Switch Div.
Freeport, Illinois

92194
Alpha Wire Corp.
Elizabeth, New Jersey

93332
Sylvania Electric Products
Woburn, Massachusetts

94988
Wagner Electric Corp.
Tung-Sol Div.
Newark, New Jersey

95146
Alco Electronic Products Inc.
Lawrence, Massachusetts

95275
Vitramon Inc.
Bridgeport, Connecticut

95303
RCA Corp
Receiving Tube Div.
Cincinnati, Ohio

95348
Gordo's Corp.
Bloomfield, New Jersey

95712
Bendix Corp.
Franklin, Indiana

97913
Industrial Electronic
Hardware Corp.
New York, New York

97945
Penwalt Corp.
SS White Industrial Products Div.
Piscataway, New Jersey

98278
Malco A. Microdot Co., Inc.
Connector & Cable Div.
Pasadena, California

98291
Sealectro Corp.
Mamaroneck, New York

98388
Royal Industries
Products Div.
San Diego, California

98978
IERC
Burbank, California

99120
Plastic Capacitors, Inc.
Chicago, Illinois

99217
Bell Industries Elect.
Burbank, California

99392
STM
Oakland, California

99515
ITT Jennings Monrovia Plant
Monrovia, California

99779
Use 29587
Bunker-Ramo Corp.
Landsdowne, Pennsylvania

99942
Centrelab Semiconductor
El Monte, California

VALHALLA SCIENTIFIC INC.

7576 TRADE ST.
SAN DIEGO, CA 92121

PHONE: (619) 578-8280
TELEX: 181750 (VALHALLA SDG)

www.manualsplus.com
1006160